SIEMENS

Gigaset C670

User Manual

Catalog

Safty precaution....2
Installing the base....3
Inserting the battery and charging....3
Handset at a glance....5
Base at a glance....6
Registering handsets....8
Deregistering handsets....8
Paging handsets....8
Setting date and time....8
Basic Operation....9
Activating/Deactivating keypad lock....9
Activating/Deactivating ringer tone....9
Back to the idle....9
Operating the menu....9
Correcting wrong input....9
Making calls....10
Making an external call....10
Mute....10
Ending a call....10
Accepting a call....10
Activating/deactivating Auto answer....10
Caller ID....**10**
Using directory....11
Phonebook....11
Last number redial list....11
Calls list....11
IP dialing....12
Using several handsets....13
Intercom....13
Conference call....13
Handset setting....14
Ringer tone setting....14
Contrast setting....14
Activating/Deactivating the keypad beep....14
Language setting....14
Handset reset....14
Base station setting....15
Base tone setting....15
Base reset....15
Prefix PABX number....16
Appendix....17
Menu tree....18
Standard character....20

Safety precaution

Caution:

Read the safety precaution and the instruction before use.

Explain the contents to your children and the potential hazards associated with using the telephone.

Only use the main adapter supplied.

Fit only the recommended rechargeable batteries of the same type! Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.

Insert rechargeable batteries as indicated by their polarity symbols, and use them according to these instructions (polarity symbols can be seen in the handset's battery compartments).

The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. operation rooms.

The handset may cause an unpleasant humming noise in hearing aids.

Eo not install the base station in bathrooms or showers. The handset and base are not waterproof.

Switch off your phone when onboard aircraft. Ensure that it cannot be switched on and again accidentally.

Do not use your phone in environments with a potential explosion hazard, e.g. auto paint shops.

If you give your Gigaset to someone else, make sure you also give them the operating manual.

Dispose of the batteries and phone in accordance with environmental regulations.

Preparing to use the phone

Installing the base

Connect the Base to power cord (220V) and phone cord, place the cords in the cord recesses.

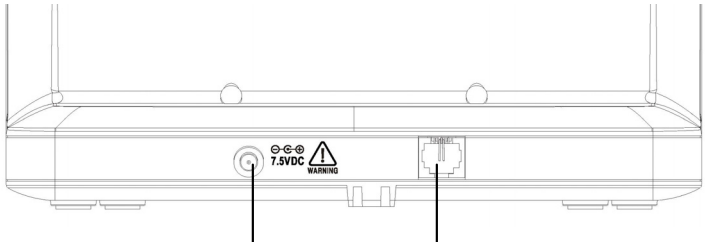

Connect Power Cord Connect Phone Cord

Notice:

Using the phone in a dry and indoor environment.

Try to place the phone on the center of your house.

Keep the phone away from hot things or other electric appliances, and no sunshine allowed.

Try to keep the phone away from other wireless equipment.

Keep the phone away from dust and corrosive liquid and air.

Remind with friendliness:

Keep the power adapter connects with Base all the time, or the Handset can’t dialing out.

Inserting the battery and charging

Notice:

It’s recommended to use the batteries supplied by SIEMENS, i.e.never use the conventional (non-rechargeable) battery or other type of battery, or it could cause significant damage to health or property. For example: the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

Install the batteries as the polarity indicated in the case.

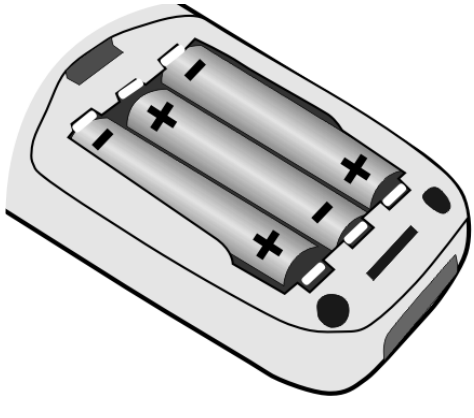

Closing the battery cover

Put the cover on the phone as indicated on the picture below, push the cover upward until click sound is heard, means the cover is fixed properly.

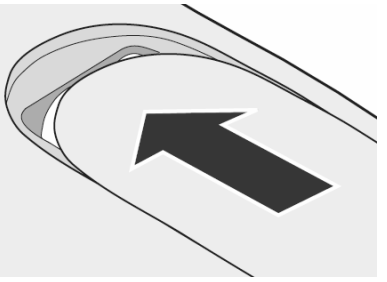

Open the cover

Push downward to open the cover.

First time battery charging

Put the handset on the base for charging. Please continue charging for more than15 hours when first time using.

The battery icon will flash on the top right of the display.

Remind with friendliness:

- After the first time charging, the handset can be put on the base (or charger) after talking/operation.
- The battery pack heats up during charging. This is normal and not dangerous.
- After a time, the battery capacity will decrease for technical reasons.

Handset at a glance

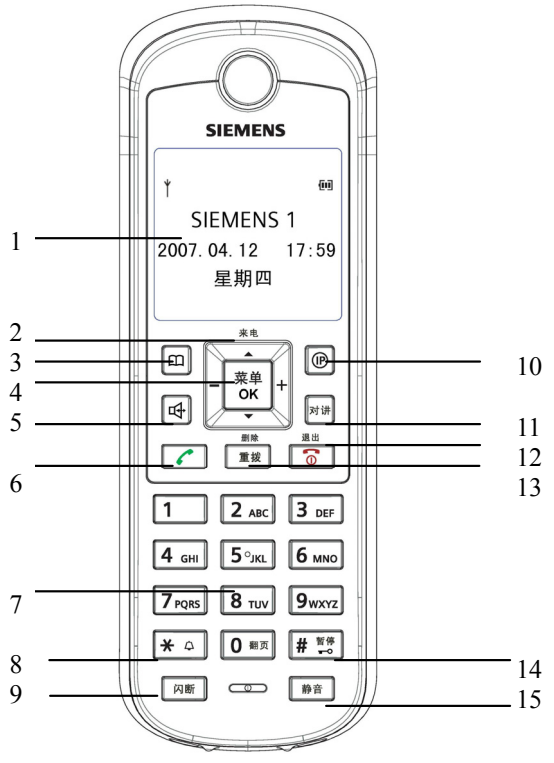

1， Display
2， Navi Key/Incoming Call
3， Phonebook
4， Menu/OK
5， Hands free
6， Talk
7， Digital keys
8， *Key (Ringer off by long press)
9， Flash
10，IP Dialing
11，Intercom Key
12，End/Back (On/Off by long press)
13，Radial/Delete
14，#Key (Lock keypad by long press)
15，Mute Key

Handset LCD

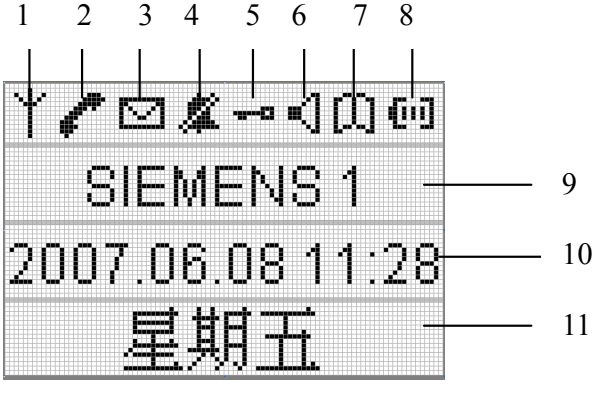

1， Radio signal
2， Talk
3， Incoming Call
4， Ringer off
5， Keypad lock
6， Hands free
7， Phonebook
8， Battery Icon
9， Handset Name
10，Date and Time
11，Weekday

Base at a glance

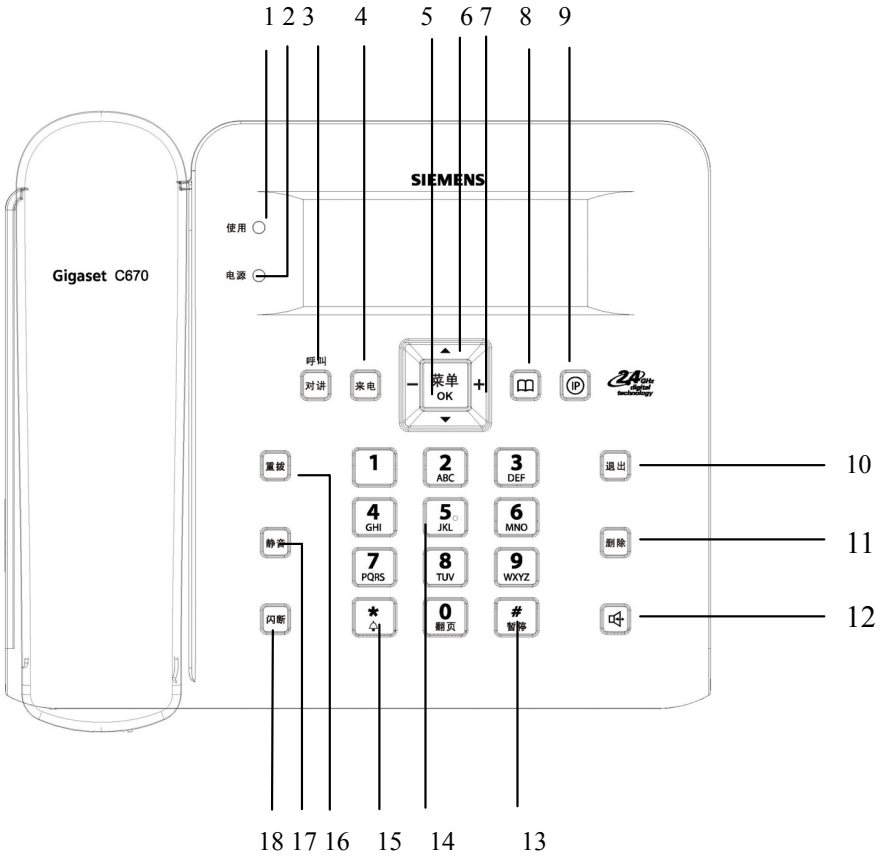

1, Using LED
2, Power LED
3, Intercom/Paging
4, Incoming Call
5, Menu/OK
6, Navi-key (Forward / Backward)
7, Volume key (Increase / Decrease)
8, Phonebook
9, IP Dialing
10, Back
11, Delete
12, Hands free
13, #/Pause Key
14, Digital Key
15, * / tone off
16, Redial Key
17, Mute Key
18, Flash Key

Base LCD

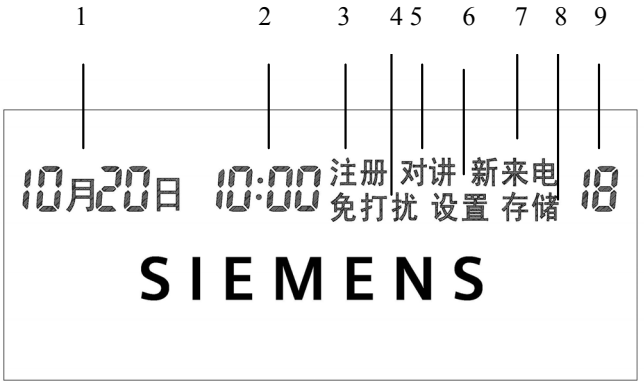

1, Date
2, Time
3, Registering
4, Ringer OFF
5, Intercom
6, Setting
7, Incoming Call
8, Storage
9, Counts of Incoming Call log

Quick Index

Register

Registering Handset

Handset will auto register to base on **first using.**
If auto register failed, please do the operations as belowing.

Operations on Handset：

Press 菜单 ➡ ▲ ▼ Select ADVANCED SET. OK

➡ ▲ ▼ REGISTRATION OK ➡ REGISTER HANDSET? OK

➡ PLEASE CONFIRM REGISTRATION OK ➡ HOLD BASE PAGE WAIT FOR BEEP

Operations on Base：

Hold Base Paging key until Beep ➡ Input Handset Name OK

After registered successfully, the handset goes back to idle status. The and the handset number will display on the displayer.

You can register 4 handsets on 1 Base at most.

If fail to register, please repeat the operation above and try again.

Deregister

Deregistering handsets

Notice: Don't do this unless necessary!

Press 菜单 ➡ ▲ ▼ Select ADVANCED SET. OK

➡ ▲ ▼ DEREGISTRATION OK ➡ MOVE TO BASE CONFIRM DEREG OK

➡ DEREGISTERED

Handset will ask for registering after deregistered, otherwise you will not able to dial by handset.

Paging

Paging handsets

You can locate your handset using the base station.

Briefly press 对讲/呼叫 (paging) ➡ PAGING EXTENSION?

➡ Input the number of handset for paging, press * Key for all handsets.

Handset paged will ring, even if the ringer tone was switched off.

End paging:

briefly press 对讲/呼叫 (paging) key on the base station or ☎ key on handset.

Time Setting

Setting Time and Date

Press 菜单 ➡ ▲ ▼ Select TIME SETTING OK ➡ Input Time/Date OK

e.g.(only for reference)：

Setting Time/Date to 2008-7-17 20:38

Enter TIME SETTING，Ordinal inputing：203820080717 OK

Remind with friendliness:

You do not need to set Time/Date again on base, for handset will synchronize this setting to base automatically.

Quick Index

keypad lock

Ringer OFF/ON

End / Back

Menu / OK

Delete

Scroll

Basic Operations

Activating/Deactivating keypad lock

Long press (#) **(handset)** to toggle lock / unlock. LCD will display 🔒.

It will unlock automatically while a call incoming. And Re-lock after talking.

Ringer OFF/ON

Long press (*) to turn off ringer tone.

Handset LCD will display 🔕, **Base** LCD will display **免打扰**

Long press (*) once again to turn on ringer.

Back to the idle

You can go back to the idle status by the following ways:

Press [☎] key **(Handset)** back to the idle.

Press [退出] key **(Base)** back to the idle.

Operating the menu

Your telephone's functions are accessed from a menu with a number of levels--Main menu and sub-menu.

To open the main menu, press [菜单] with the handset in idle status.

Scroll to the required function with [▲ ▼] and press [OK] to access the function.

Correcting wrong inputs

Press [删除] (Handset/Base) to delete the latest inputs.

Scrolling to display long number

If a telephone number is more than 12 digits in Phonebook or Redial list,

LCD will display ▶

You can use the [翻页] (Handset/Base) for scrolling to display next digits of the whole number.

Quick Index

(Make a call)

(Mute On)

(End a call)

Auto answer

Caller ID

Making calls

Making an external calls

Enter the phone number then press or .

Or:

Press or and then enter number.

Remind with friendliness:

You can also dial out by using the number stored in phonebook or redial list.

Accepting a call

Press or to accept an incoming call.

If the handset is in the base and the **AUTO ANSWER** function is activated, the handset will take a call automatically when you lift it out of the cradle.

Adjusting talking volume

You can press to adjust talking volume

Mute

Press 静音 to deactivate the microphone during the talk with external line. Screen display **MUTE ON**

Press 静音 again to talk with external line again.

Ending a call

Press to end a talk.

Activating/deactivating Auto answer

When this function is activated, when a call arrives you can simply lift the handset out of the base without having to press the talk key .

Press 菜单 ➡ ▲ ▼ **PERSONAL SET.** OK ➡ ▲ ▼ **AUTO ANSWER** OK ➡ ▲ ▼ Select **ON / OFF** OK

Caller ID

Requirements: you have applied the CID service.

When you get a call, the caller's phone number will be displayed on your handset.

The caller's name and number will be both displayed if it is stored in the phonebook

Remark:

The phone was made according to the national standards. However sometimes the CID function can't be displayed properly for the reason of some special using condition: e.g. connecting several phone on a single line or the PABX not a standard appliance. Please contact with your local telecom service supplier.

Quick Index
Phonebook
Add entry
Edit entry
Delete entry
Delete list
重拨 Redial
来电 CID List

Using the phonebook and lists

Phonebook

You can save up to 50 phone numbers

Press 📖 to open the phonebook in idle. Press ▲ ▼ to look for entries

Add entry (HS/BS)

Press 📖 ➡ OK ➡ ▲ ▼ Select ADD ENTRY OK ➡ ENTER NAME OK ➡ ENTER NUMBER OK

Length of entry

Name: 15 letters

Phonebook number: 24 digits

Dialling with the directory

Press 📖 ➡ ▲ ▼ Select an entry ➡ Press 📞 to dial.

Edit entry (HS/BS)

Press 📖 ➡ OK ➡ ▲ ▼ Select EDIT ENTRY OK ➡ EDIT NAME OK ➡ EDIT NUMBER OK

Delete entry (HS/BS)

Press 📖 ➡ OK ➡ ▲ ▼ Select DELETE ENTRY OK ➡ ▲ ▼ Select an entry OK ➡ DELETE? OK ➡ DELETED

Please delete needless entries to keep up the phonebook storage

Delete list (HS/BS)

Press 📖 ➡ OK ➡ ▲ ▼ Select DELETE LIST OK ➡ DELETE? OK ➡ DELETE ALL? OK ➡ DELETED

Redial list (HS/BS)

This list contains the 10 last dialled numbers.

Press 重拨 ➡ ▲ ▼ Select a number ➡ Press 📞 to dial.

CID List (HS/BS)

Press ▲ ▼/来电 ➡ ▲ ▼ Select a number ➡ Press 📞 to dial.

Precondition:

Had applied CID, and there are some incoming calls stored in the list.

Last 30 entries will be stored into the list.

Setting to display ALL CALLS / MISSED CALL

Press 菜单 ➡ ▲ ▼ PERSONAL SET. OK ➡ ▲ ▼ CALL LOGS OK ➡ ▲ ▼ Select ALL CALLS / MISSED CALL OK

If you set missed call, only missed call will be stored into the list.

Quick Index

IP number

IP dialling

IP dialling

Store IP number

Press IP (LCD display the former record) ➡ Press IP again ➡ ENTER NAME OK ➡ ENTER NUMBER OK。

The method that input **IP number** below is for your reference since it may different from various cards.

1, Input the IP access number. E.g. 17910

2, Insert "P" by double press key # if necessary (such as a voice prompt interrupt).

e.g. 17910P1P(means insert an pause P, select Chinese language, then insert pause again)

3, Input IP number and Password, end with #.

e.g. 17910P1P22902169939 8#5800#

Press OK after all the input.

Remind with friendliness:

The IP dialling mentioned here refers to the function of the chargeable card, not the service that supplied by telecom

Using the IP dialling

There are three ways to dial with IP

1, Input a long distance number ➡ press IP

2, Select a number in phonebook/redial list ➡ press IP

3, Press or ➡ press IP ➡ input long distance number

Quick Index

Intercom

Conference call

Using several handsets

Intercom

Handsets that registered on the same base can talk each other without calling fee.

Calling handsets

Press 对讲 ➡ Input the number of Handset you want to call

(Handsets1~4, Base 0, * for all)

The other Handset/Base answering the call by pressing [ ] or [ ]

Ending a call

Press [ ] to end the call.

Transfer an external call to other handset

During the talk with external call, press 对讲 ➡ press the handset number you want to transfer. You can press [ ] immediately or inform another handset before you end tall.

Internal consulting call

During the talk with external call, you can call another handset for consulting.

Press 对讲 ➡ press the handset number you want to consult with. Intercom builds up after another handset answering that call.

It will auto come back to the external talk when the intercom ends.

Conference call

You are conducting an external call. An internal caller can listen in on this call and take part in the conversation.

Precondition: The "CONFERENCE" function must be activated.

Activate/Deactivate conference call

Press 菜单 ➡ [▲ ▼] CONFERENCE OK ➡ [▲ ▼] Select ON / OFF OK

Start a conference call:

When you want to start a conference call during an external talk:

Press [ ] or [ ] to start a conference call by other handset.

The external call remains if one of the handset leave the conference call by pressing [ ]

Quick Index

Audio Setting

Contrast

Key Beep

Language

Handset Reset

Handset Setting

Handsets have default set, you can change them to your personal set.

Audio Setting

Volume

Press 菜单 ➡ ▲ ▼ AUDIO SETTING OK ➡ ▲ ▼ RINGER VOLUME OK ➡ ▲ ▼ Select（HIGH, MEDIUM, LOW, OFF, ASCENDING）OK

Melody

Press 菜单 ➡ ▲ ▼ AUDIO SETTING OK ➡ ▲ ▼ RINGER MELODY OK ➡ ▲ ▼ Select（MELODY 1 to MELODY 10）OK

Contrast

Press 菜单 ➡ ▲ ▼ PERSONAL SET. OK ➡ ▲ ▼ CONTRAST OK ➡ ▲ ▼ Select（LEVEL 1 to LEVEL 3）OK

Key Beep ON/OFF

Press 菜单 ➡ ▲ ▼ PERSONAL SET. OK ➡ ▲ ▼ KEY BEEP OK ➡ ▲ ▼ Select（ON / OFF）OK

Language Setting

Press 菜单 ➡ ▲ ▼ PERSONAL SET. OK ➡ ▲ ▼ LANGUAGE OK ➡ ▲ ▼ Select（ENGLISH / CHINESE）OK

Handset Reset

Press 菜单 ➡ ▲ ▼ ADVANCED SET. OK ➡ ▲ ▼ HANDSET RESET OK ➡ ▲ ▼ Select（NO / YES）OK

Quick Index

Time Setting

Base Tone

Key Beep

Contrast

Base Reset

Base Setting

Time Setting

There is no need to set time again if you have set by handset.

Press 菜单 ➡ ▲ ▼ TIME SETTING OK

➡ TIME/DATE Input Time/Date OK ➡ WEEKDAY Input Weekday OK

Audio Setting

Volume

Press 菜单 ➡ ▲ ▼ AUDIO SETTING OK ➡RINGER VOLUME OK

➡ ▲ ▼ Select (HIGH，MEDIUM，LOW，OFF) OK

Melody

Press 菜单 ➡ ▲ ▼ AUDIO SETTING OK ➡ RINGER MELODY OK

➡ ▲ ▼ Select (MELODY 1 to MELODY 10) OK

Key Beep ON/OFF

Press 菜单 ➡ ▲ ▼ KEY BEEP OK

➡ ▲ ▼ Select ON / OFF OK

Contrast

Press 菜单 ➡ ▲ ▼ CONTRAST OK

➡ ▲ ▼ Select LEVEL1—LEVEL3 OK

Base Reset

Press 菜单 ➡ ▲ ▼ BASE RESET OK

➡ ▲ ▼ Select NO / YES OK

Quick Index

TONE / PAUSE

FLASH TIME

PABX/PREFIX

NET WORK

Base Setting under PABX

Only if your Base connected to PABX, the following settings shall effect

Tone/Pause

Press 菜单 ➡ ▲ ▼ ADVANCE SET OK

➡ ▲ ▼ Select TONE / PAUSE OK

Flash Time

Press 菜单 ➡ ▲ ▼ ADVANCE SET OK ➡ FLASH TIME OK

➡ ▲ ▼ Select (100， 300， 600) OK

PABX PREFIX

Normally the prefix number, such as "0", is need to be added when you want to dial an external number if you phone is under PABX. This number can be automatically added if you set it in the Prefix.

Press 菜单 ➡ ▲ ▼ ADVANCE SET OK ➡ PABX PREFIX OK

➡ Input a PREFIX number (2 digits at most) OK

Net Work Setting

Press 菜单 ➡ ▲ ▼ ADVANCE SET OK ➡ NET WORK OK

➡ ▲ ▼ Select (PUBLIC NET or PRIVATE NET) OK

Dial an external number

Precondition: Set Network to PRIVATE NET and set a PABX PREFIX number.

Enter the phone number then press [ ] or [ ]

e. g.

Set PABX PREFIX number to 9

Enter 1234，Press [ ] or [ ]，number dialled out is 1234

Enter 12345，Press [ ] or [ ]，number dialled out is 9P12345

Caution:

PABX PREFIX will not implement if you press [ ] or [ ] and then enter number.

Appendix

Care

Wipe the base station and handset with a damp cloth (no solvents) or an antistatic cloth.
Never use a dry cloth. This can cause static.

Contact with liquid

If the handset has come into contact with liquid:

Switch off the handset and remove the battery pack immediately.

Allow the liquid to drain from the handset.

Pat all parts dry, then with the battery compartment open and the keypad facing down place the handset in a dry, warm place for at least 72 hours (not in a microwave, oven etc.).

Do not switch on the handset again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

General specifications

Standard	WDCT
Range	up to 300 m outdoors, up to 50 m in buildings
Power supply	220V~/50HZ
Temperature	0—45° C
Handset size	152x52x28mm
Handset weight	138g
Battery	750mAh
Calling time	6 hours
Standby time	140 hours

Questions and answers

If you have any queries about the use of your phone, you can contact us any time at www.siemens.com.cn/shc.

Or

Call hotline: 4006 706 007

Menu Tree （Handset）

AUDIO SETTING	VOLUME	HIGH
		MEDIUM
		LOW
		OFF
		ASCENDING
	MELODY	MELODY 1
		…to
		MELODY 10
CONFERENCE	ON	
	OFF	
TIME SETTING		
PERSONAL SET.	CALL LOGS	ALL CALLS
		MISSED CALL
	AUTO ANSWER	ON
		OFF
	CONTRAST	LEVEL 1
		LEVEL 2
		LEVEL 3
	KEY BEEP	ON
		OFF
	LANGUAGE	CHINESE
		ENGLISH
ADVANCED SET.	REGISTERATION	
	DEREGISTERATION	
	HANDSET RESET	NO
		YES

Menu Tree (Base）

TIME SETTING		
AUDIO SETTING	RINGER VOLUME	HIGH
		MEDIUM
		LOW
		OFF
	RINGER MELODY	MELODY 1
		to
		MELODY 10
KEY BEEP	ON	
	OFF	
CONTRAST	1/2/3	
FLASH TIME	100/300/600	
TONE/PULSE	TONE	
	PULSE	
NETWORK	PUBLIC NET.	
	PRIVATE NET.	
BASE RESET	YES	
	NO	
NO.OF RINGS	3 RINGS	
	6 RINGS	
	TOLL SAVER	
PABX PREFIX		

Standard characters

You can input some characters (e.g. during phonebook edit) by continue pressing a key:

	1 x	2 x	3 x	4 x	5 x
0	0				
1	Space	▌	✷	!	¡
2	A	B	C	(	2
3	D	E	F	)	3
4	G	H	I	/	4
5	J	K	L	`	5
6	M	N	□	▌	6
7	P	Q	R	S	7
8	T	U	V	?	8
9	W	X	Y	Z	9
*	✷				
#	#	P			